

Uputstva za demontažu izvora svjetlosti i predspojene naprave

Primjenjivo na: USC

- 1) Izbaciti sklopku iz funkcije kako svjetiljka ne bi bila pod naponom prilikom demontaže.
 - 2) Vakumskom hvataljkom dobivenom uz svjetiljku uhvatiti jedan kraj stakla i povući. Okvir je povezan sajlama s kućištem pa može ostati visiti u zraku.
 - 3) Odvojiti žicu koja je spojena na LED module pritiskom na griper žice na LED modulu tankim predmetom.
 - 4) Odvrnuti vijke nosača LED modula od ostatka svjetiljke. Prilikom odvrtnja, pridržavati nosač s LED modulom kako ne bi pao.
 - 5) Laganim pritiskom na krilca držača LED modula (push-fix), te njihovim skupljanjem, utisnite push-fix kroz rupu na nosaču te ga tako izbacite van. Učinite tako za sve push-fixeve i oslobodit ćete LED modul.
 - 6) Odvojiti napojni kabel od kleme pritiskom na gripere kleme te izvlačenjem žica.
 - 7) Odvojiti žice koje su spojene na driver pritiskom na griper žice na driveru tankim predmetom.
 - 8) Odvrnite matice i/ili vijke koji nose driver.
 - 9) Spojiti sve komponente nazad u svjetiljku da bi svjetiljka ispravno funkcionirala.
 - 10) Vratiti sklopku u radno stanje kako bi doveli napajanje do svjetiljke.
-

Instructions for dismantling the light source and pre-connected device

Applicable to: USC

- 1) Turn off the switch so that the lamp is not under voltage during disassembly.
- 2) Use the vacuum gripper supplied with the lamp to grab one end of the glass and pull. The frame is connected to the case by cables, so it can remain suspended in the air.
- 3) Disconnect the wire connected to the LED module by pressing the wire gripper on the LED module with a thin object.
- 4) Unscrew the screws of the LED module support from the rest of the lamp. When unscrewing, hold the support with the LED module so that it does not fall.
- 5) By gently pressing the wings of the LED module holder (push-fix), and by pulling them together, push the push-fix through the hole on the support and thus eject it. Do this for all push-fixes and you will free the LED module.
- 6) Disconnect the power cable from the terminal by pressing the grippers of the terminal and pulling out the wires.
- 7) Disconnect the wires that are connected to the driver by pressing on the gripper of the wires on the driver with a thin object.
- 8) Unscrew the nuts and/or screws holding the driver.
- 9) Connect all components back to the lamp to make the lamp work properly.
- 10) Return the switch to the working state to supply the power to the lamp.