

Uputstva za demontažu izvora svjetlosti i predspojene naprave

Primjenjivo na: NSO, NSM, NSH

- 1) Izbaciti sklopku iz funkcije kako svjetiljka ne bi bila pod naponom prilikom demontaže.
 - 2) Izvaditi difuzor tako da ga se podigne do granice s jedne strane, što omogućava da ga se s druge strane izvuče.
 - 3) Odvrnuti ovesne vijke koji drže svjetiljku za strop.
 - 4) Odvojiti napojni kabel od kleme pritiskom na gripere kleme te izvlačenjem žica.
 - 5) Odvojiti žicu koja je spojena na svaki LED modul i driver pritiskom na griper žice na LED modulu/driveru tankim predmetom.
 - 6) Odvrnite matice i/ili vijke koji nose driver.
 - 7) Laganim pritiskom na krilca držača LED modula (push-fix), te njihovim skupljanjem, utisnite push-fix kroz rupu na nosaču te ga tako izbacite van. Učinite tako za sve push-fixeve i oslobodit ćete LED modul.
 - 8) Spojiti sve komponente nazad u svjetiljku da bi svjetiljka ispravno funkcionirala.
 - 9) Vratiti sklopku u radno stanje kako bi doveli napajanje do svjetiljke.
-

Instructions for dismantling the light source and pre-connected device

Applicable to: NSO, NSM, NSH

- 1) Turn off the switch so that the lamp is not under voltage during disassembly.
- 2) Take out the diffuser by lifting it to the limit on one side, which allows it to be pulled out on the other side.
- 3) Unscrew the suspension screws that hold the lamp to the ceiling.
- 4) Disconnect the power cable from the terminal by pressing the grippers of the terminal and pulling out the wires.
- 5) Disconnect the wire that is connected to each LED module and driver by pressing the wire gripper on the LED module/driver with a thin object.
- 6) Unscrew the nuts and/or screws holding the driver.
- 7) By gently pressing the wings of the LED module holder (push-fix), and by pulling them together, push the push-fix through the hole on the support and thus eject it. Do this for all push-fixes and you will free the LED module
- 8) Connect all components back to the lamp to make the lamp work properly.
- 9) Return the switch to the working state to supply the power to the lamp.