

Uputstva za demontažu izvora svjetlosti i predspojene naprave

Primjenjivo na: Planet, Planet ECO

- 1) Izbaciti sklopku iz funkcije kako svjetiljka ne bi bila pod naponom prilikom demontaže.
 - 2) Izvaditi difuzor iz svjetiljke tako da se jedna strana difuzora podigne do vrha. Difuzor ima 2 ravna reza sa strana za lakše umetanje i vađenje. Izvući difuzor iz svjetiljke tako da ti rezovi dođu na najširi dio svjetiljke. Pažljivo rukovati difuzorom kako ne bi došlo do pucanja. Po potrebi, moguće je difuzor zakretati oko svoje osi radi pozicioniranja rezova na difuzoru.
 - 3) Odvrnuti vijke koji drže podnicu s LED modulom i driverom te odvojiti napojni kabel od klemne pritiskom na gripere klemne te izvlačenjem žica.
 - 4) Odvojiti žicu koja je spojena na svaki LED modul i driver pritiskom na gripere žice na LED modulu/driveru tankim predmetom.
 - 5) Odvrnite matice i/ili vijke koji nose driver.
 - 6) Laganim pritiskom na krilca držača LED modula (push-fix), te njihovim skupljanjem, utisnite push-fix kroz rupu na nosaču te ga tako izbacite van. Učinite tako za sve push-fixeve i oslobodit ćete LED modul.
 - 7) Spojiti sve komponente nazad u svjetiljku da bi svjetiljka ispravno funkcionirala.
 - 8) Vratiti sklopku u radno stanje kako bi doveli napajanje do svjetiljke.
-

Instructions for dismantling the light source and pre-connected device

Applicable to: Planet, Planet ECO

- 1) Turn off the switch so that the lamp is not under voltage during disassembly.
- 2) Remove the diffuser from the lamp so that one side of the diffuser rises to the top. The diffuser has 2 straight cuts on the sides for easier insertion and removal. Pull the diffuser out of the lamp so that these cuts reach the widest part of the lamp. Handle the diffuser carefully to avoid cracking. If necessary, it is possible to rotate the diffuser around its axis in order to position the cuts on the diffuser.
- 3) Unscrew the screws that hold the sheet metal with the LED module and the driver and separate the power cable from the terminal by pressing the grippers of the terminal and pulling out the wires.
- 4) Disconnect the wire that is connected to each LED module and driver by pressing the wire gripper on the LED module/driver with a thin object.
- 5) Unscrew the nuts and/or screws holding the driver.
- 6) By gently pressing the wings of the LED module holder (push-fix), and by pulling them together, push the push-fix through the hole on the support and thus eject it. Do this for all push-fixes and you will free the LED module
- 7) Connect all components back to the lamp to make the lamp work properly.
- 8) Return the switch to the working state to supply the power to the lamp.