

Uputstva za demontažu izvora svjetlosti i predspojene naprave

Primjenjivo na: NSL

- 1) Izbaciti sklopku iz funkcije kako svjetiljka ne bi bila pod naponom prilikom demontaže.
 - 2) Odvrtanjem vijaka s bočnih strana svjetiljke osloboditi masku svjetiljke od kućišta. Pridržavati masku svjetiljke kako ne bi pala prilikom odvrtnja posljednjeg vijka.
 - 3) Odvojiti napojni kabel od kleme pritiskom na gripere kleme te izvlačenjem žica.
 - 4) Laganim potezanjem na jednu stranu, skinuti plastične odsijače s leća kako bi dobili pristup vijcima koji drže leće i LED pločice.
 - 5) Odvojiti žicu koja je spojena na svaku LED pločicu i driver pritiskom na griper žice na LED pločice/driveru tankim predmetom.
 - 6) Odvrite matice i/ili vijke koji nose driver.
 - 7) Odvrtanjem vijaka osloboditi leće i LED pločice.
 - 8) Spojiti sve komponente nazad u svjetiljku da bi svjetiljka ispravno funkcionirala.
 - 9) Vratiti sklopku u radno stanje kako bi doveli napajanje do svjetiljke.
-

Instructions for dismantling the light source and pre-connected device

Applicable to: NSL

- 1) Turn off the switch so that the lamp is not under voltage during disassembly.
- 2) Unscrew the screws on the sides of the lamp to release the lamp cover from the housing. Hold the lamp cover so that it does not fall when the last screw is removed.
- 3) Disconnect the power cable from the terminal by pressing the grippers of the terminal and pulling out the wires..
- 4) By gently pulling to one side, remove the plastic spacers from the lenses to gain access to the screws that hold the lenses and LED panels.
- 5) Disconnect the wire that is connected to each LED panel and driver by pressing the wire gripper on the LED panel/driver with a thin object.
- 6) Unscrew the nuts and/or screws holding the driver.
- 7) Unscrew the screws to release the lenses and the LED panels.
- 8) Connect all components back to the lamp to make the lamp work properly.
- 9) Return the switch to the working state to supply the power to the lamp.