

Uputstva za demontažu izvora svjetlosti i predspojene naprave

Primjenjivo na: USL

- 1) Izbaciti sklopku iz funkcije kako svjetiljka ne bi bila pod naponom prilikom demontaže.
 - 2) Zakrenuti krajnje leće kako bi se oslobodio pristup vijku za ovjes.
 - 3) Prilikom odvrtnja ovjesa pridržavati svjetiljku kako bi ovjes uspio pustiti strop te iz razloga da svjetiljka ne padne kada zadnji ovjes popusti.
 - 4) Odvrnuti vijke poklopca s leđa svjetiljke kako bi se dobio pristup klemi. Odvojiti napojni kabel od kleme pritiskom na gripere kleme te izvlačenjem žica.
 - 5) Odvrnuti vijke s leđa svjetiljke koji spajaju podnicu i ostatak svjetiljke.
 - 6) Laganim potezanjem na jednu stranu, skinuti plastične odsijače s leća kako bi dobili pristup vijcima koji drže leće i LED pločice.
 - 7) Odvojiti žicu koja je spojena na svaku LED pločicu i driver pritiskom na griper žice na LED pločici/driveru tankim predmetom.
 - 8) Odvrnite matice i/ili vijke koji nose driver.
 - 9) Odvrtnjem vijaka osloboditi leće i LED pločice.
 - 10) Spojiti sve komponente nazad u svjetiljku da bi svjetiljka ispravno funkcionirala.
 - 11) Vratiti sklopku u radno stanje kako bi doveli napajanje do svjetiljke.
-

Instructions for dismantling the light source and pre-connected device

Applicable to: USL

- 1) Turn off the switch so that the lamp is not under voltage during disassembly.
- 2) Pivot the end lenses to free access to the suspension bolt.
- 3) When unscrewing the suspension, hold the lamp so that the suspension can release the ceiling and for the reason that the lamp does not fall when the last suspension loosens.
- 4) Unscrew the cover screws from the back of the lamp to access the terminal. Disconnect the power cable from the terminal by pressing the grippers of the terminal and pulling out the wires.
- 5) Unscrew the screws from the back of the lamp that connect the base and the rest of the lamp.
- 6) By gently pulling to one side, remove the plastic spacers from the lenses to gain access to the screws that hold the lenses and LED panels.
- 7) Disconnect the wire that is connected to each LED panel and driver by pressing the wire gripper on the LED panel/driver with a thin object.
- 8) Unscrew the nuts and/or screws holding the driver.
- 9) Unscrew the screws to release the lenses and the LED panels.
- 10) Connect all components back to the lamp to make the lamp work properly.
- 11) Return the switch to the working state to supply the power to the lamp.