

Uputstva za demontažu izvora svjetlosti i predspojene naprave

Primjenjivo na: Intube, Intube PR

- 1) Izbaciti sklopku iz funkcije kako svjetiljka ne bi bila pod naponom prilikom demontaže.
 - 2) Odvrnuti vijke s bočnog poklopca na strani koja je dalje od uvodnice za struju.
 - 3) Primiti drugu bočnu stranicu na koju je još uvijek pričvršćen nosač LED-a te izvlačiti onoliko koliko je potrebno da se dobije pristup klemi. Kada je klema vidljiva, pritiskom na gripere kleme otpustiti napojni kabel sa svjetiljke.
 - 4) Izvući nosač u potpunosti te odvojiti žicu koja je spojena na svaki LED modul i driver pritiskom na griper žice na LED modulu/driveru tankim predmetom.
 - 5) Odvrnite matice i/ili vijke koji nose driver.
 - 6) Laganim pritiskom na krilca držača LED modula (push-fix), te njihovim skupljanjem, utisnite push-fix kroz rupu na nosaču te ga tako izbacite van. Učinite tako za sve push-fixeve i oslobodit ćete LED modul.
 - 7) Spojiti sve komponente nazad u svjetiljku da bi svjetiljka ispravno funkcionirala.
 - 8) Vratiti sklopku u radno stanje kako bi doveli napajanje do svjetiljke.
-

Instructions for dismantling the light source and pre-connected device

Applicable to: Intube, Intube PR

- 1) Turn off the switch so that the lamp is not under voltage during disassembly.
- 2) Unscrew the screws from the side cover on the side that is further from the power inlet.
- 3) Grasp the other side page where the LED is still attached and pull out as much as necessary to gain access to the terminal. When the terminal is visible, release the power cable from the lamp by pressing the grippers of the terminal.
- 4) Pull out the support completely and disconnect the wire that is connected to each LED module and driver by pressing the wire gripper on the LED module/driver with a thin object.
- 5) Unscrew the nuts and/or screws holding the driver.
- 6) By gently pressing the wings of the LED module holder (push-fix), and by pulling them together, push the push-fix through the hole on the support and thus eject it. Do this for all push-fixes and you will free the LED module
- 7) Connect all components back to the lamp to make the lamp work properly.
- 8) Return the switch to the working state to supply the power to the lamp.